



PROPELLER SHAFT ALIGNMENT INSTRUCTIONS

1. CHECK FRONT SECTION, REAR SECTION, CENTER SUPPORT BEARING AND CV JOINT FOR WEAR AND DAMAGE BEFORE INSTALLATION.

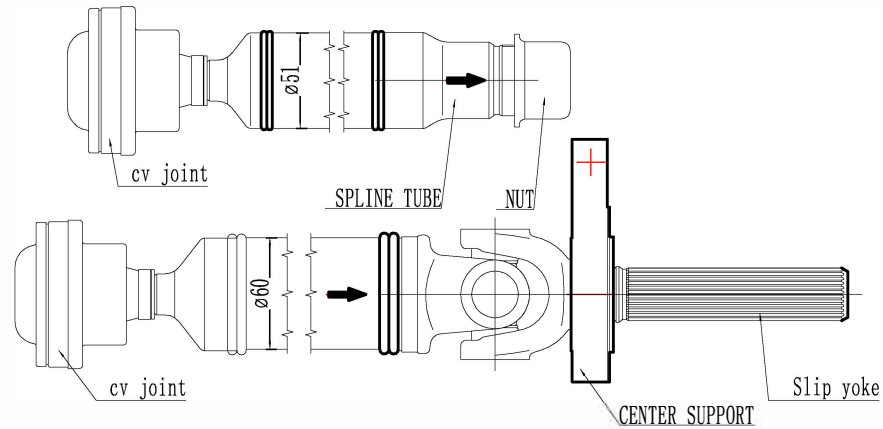

2. WHEN FITTING THE PROPELLER SHAFT TOGETHER, MAKE SURE THAT THE MARKS LINE UP WITH EACH OTHER. THE ARROW OF THE FRONT PROPELLER SHAFT MUST BE ALIGNED BETWEEN THE ARROW ON THE REAR PROPELLER SHAFT .

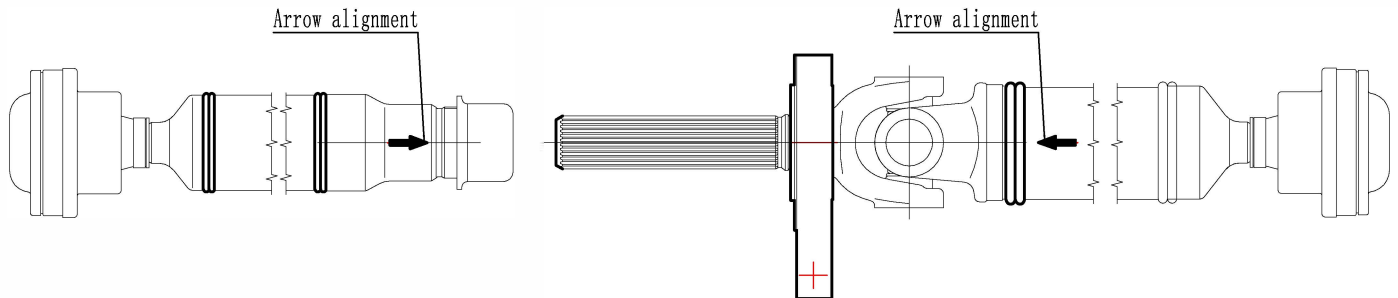

3. SCREW THE NUT TO THE END BY HAND WITHOUT TIGHTENING, MOVE THE SPLINE TUBE TO THE POSITION (USE SPANNER TO LOCK THE NUT.

use spanner to lock the nut

